




A company of SIM Tech

# **SIM7600M22\_MIFI\_Application Note\_V1.00**

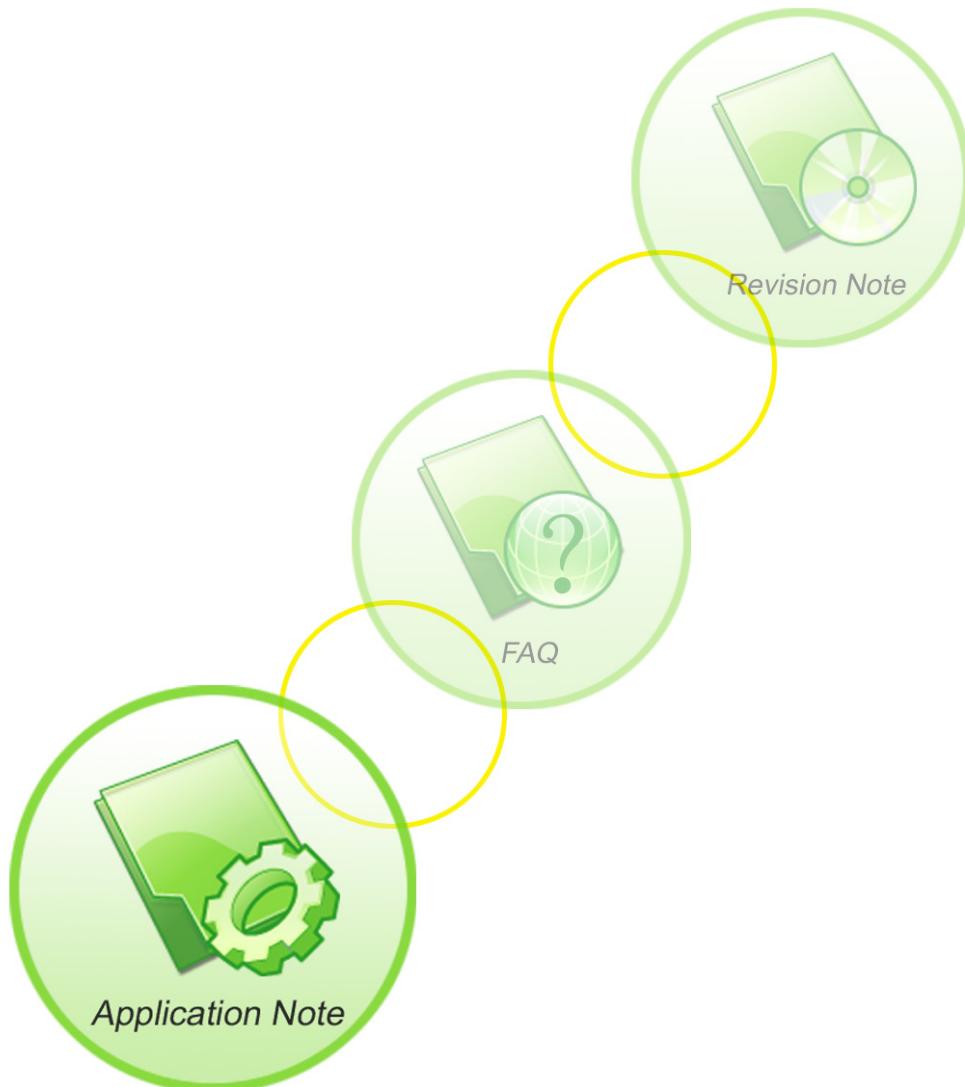

<b>Document Title:</b>	SIM7600M22 MIFI Application Note
<b>Version:</b>	1.00
<b>Date:</b>	2017-09-28
<b>Status:</b>	Release
<b>Document ID:</b>	SIM7600M22_MIFI_Application Note_V1.00

## General Notes

SIMCom offers this information as a service to its customers, to support application and engineering efforts that use the products designed by SIMCom. The information provided is based upon requirements specifically provided to SIMCom by the customers. SIMCom has not undertaken any independent search for additional relevant information, including any information that may be in the customer's possession. Furthermore, system validation of this product designed by SIMCom within a larger electronic system remains the responsibility of the customer or the customer's system integrator. All specifications supplied herein are subject to change.

## Copyright

This document contains proprietary technical information which is the property of SIMCom Limited., copying of this document and giving it to others and the using or communication of the contents thereof, are forbidden without express authority. Offenders are liable to the payment of damages. All rights reserved in the event of grant of a patent or the registration of a utility model or design. All specification supplied herein are subject to change without notice at any time.

*Copyright © Shanghai SIMCom Wireless Solutions Ltd. 2017*

## Version History

Version	Chapter	Comments
V1.00	New Version	

STIMCOM CONFIDENTIAL FILE

# Contents

<b>Version History .....</b>	2
<b>Contents .....</b>	3
<b>1. Introduction .....</b>	4
1.1 Overview.....	4
1.2 Terms and Abbreviations .....	4
1.3 Note.....	4
<b>2. MIFI Related AT Commands .....</b>	4
2.1 AT+CWMAP Open/Close WIFI .....	5
2.2 AT+CWSSID SSID setting .....	6
2.3 AT+CWBCAST Broadcast setting.....	6
2.4 AT+CWAUTH Authentication setting .....	7
2.5 AT+CWMOCH 80211 mode and channel setting.....	9
2.6 AT+CWISO Client isolation setting.....	10
2.7 AT+CWDHCP Get the current DHCP configuration .....	11
2.8 AT+CWNAT NAT type setting .....	11
2.9 AT+CWLICNT Get client number connected to the WIFI.....	12
2.10 AT+CWRSTD Restore to default setting .....	12
2.11 AT+CWMAPCFG WIFI configuration setting .....	13
2.12 AT+CWLANSRV LAN SERVER setting.....	14
2.13 AT+CWLANMSG Send message.....	15
2.14 AT+CWMACADDR Get MAC address .....	16
2.15 AT+CWNETCNCT Query the connection to the network.....	16
2.16 AT+CWSTAIP Get STA mode IP address.....	17
2.17 AT+CWSTASCAN Scan WIFI network .....	17
2.18 AT+CWSTACFG STA mode configuration setting .....	18
2.19 AT+CWUSRINFO Auth info of wifi data call setting .....	19
<b>3. Coexistence with MIFI.....</b>	20
3.1 PPP-DIALUP when MIFI is running .....	20
3.2 RMNET when MIFI is running .....	20
3.3 Embedded TCPIP when MIFI is running .....	20

## 1. Introduction

### 1.1 Overview

This document gives the usage of SIM7600M22 MIFI functions. User can get useful information about the SIM7600M22 MIFI functions quickly through this document.

The MIFI functions are provided in AT command format, and they are designed for customers to design their MIFI applications easily. User can access these MIFI AT commands through UART/ USB interface which communicates with SIM7600CE-A/SIM7600CE-T module.

### 1.2 Terms and Abbreviations

For the purposes of the present document, the following abbreviations apply:

- AT            ATTention; the two-character abbreviation is used to start a command line to be sent from TE/DTE to TA/DCE
- SSID        Service Set Identifier
- Broadcast

### 1.3 Note

MIFI uses the 6<sup>th</sup> APN (except CDMA/EVDO).

## 2. MIFI Related AT Commands

Below is the MIFI associated with AT commands. Related.

Command	Description
AT+CWMAP	Open/Close WIFI
AT+CWSSID	SSID setting
AT+CWBCAST	Broadcast setting
AT+CWAUTH	Authentication type, encrypt mode and password setting
AT+CWMOCH	80211 mode and channel setting
AT+CWISO	Client isolation setting
AT+CWDHCP	Get the current DHCP configuration
AT+CWNAT	NAT type setting
AT+CWLICNT	Get client number connected to the WIFI

AT+CWRSTD	Restore to default setting
AT+CWMAPCFG	WIFI configuration setting
AT+CWLANSRV	LAN SERVER setting
AT+CWLANMSG	Send message
AT+CWMACADDR	Get MAC address
AT+CWNETCNCT	Query the connection to the network
AT+CWSTAIP	Get STA mode IP address
AT+CWSTASCAN	Scan WIFI network
AT+CWSTACFG	STA mode configuration setting
AT+CWUSRINFO	Auth info of wifi data call setting

## 2.1 AT+CWMAP Open/Close WIFI

AT+CWMAP Open/Close WIFI	
Test Command <b>AT+CWMAP=?</b>	Response <b>+CWSSID: &lt;0-1&gt;</b>  <b>OK</b> No parameter
Read Command <b>AT+CWMAP?</b>	Response <b>+CWMAP: &lt;flag&gt;</b>  <b>OK</b> No parameter
Write Command <b>AT+CWMAP=&lt;flag&gt;</b>	Response <b>OK</b>  Parameter: <b>&lt;flag&gt;</b> 0 Close 1 Open
Reference	Note

### Examples

```
AT+CWMAP?
+CWMAP: 1
OK
```

```
AT+CWMAP=0
```

OK

## 2.2 AT+CWSSID SSID setting

AT+CWSSID SSID setting	
Read Command <b>AT+CWSSID?</b>	Response <b>+CWSSID: &lt;ssid&gt;</b>  <b>OK</b>
	No parameter
Write Command <b>AT+CWSSID=&lt;ssid&gt;</b> >	Response <b>OK</b>  Parameter: <ssid> new ssid string. 1. The max length of <ssid> is 32 bytes when the <ssid> include only ASCII characters. 2. The max length of <ssid> is 20 bytes when <ssid> include only Chinese (One Chinese characters is 2 bytes, so the max Chinese count is 10). 3. The max length of <ssid> is 22 bytes when <ssid> include ASCII and Chinese characters (One Chinese character is 2 bytes, one ASCII character is 1 byte). The default value is SIM7600MIFI. When use AP-AP mode, the default value of the second AP is SIM7600MIFI_1
Reference	Note

### Examples

```
AT+CWSSID?
```

+CWSSID: "7600MIFI"

OK

```
AT+CWSSID="7600MIFI_1"
```

OK

## 2.3 AT+CWBCAST Broadcast setting

**AT+CWBCAST Broadcast setting**

Test Command <b>AT+CWBCAST=?</b>	Response <b>+CWBCAST: (0-1)</b>  <b>OK</b> No parameter
Test Command <b>AT+CWBCAST?</b>	Response <b>+CWBCAST: &lt;broadcast&gt;</b>  <b>OK</b> No parameter
Read Command <b>AT+CWBCAST=&lt;broadcast&gt;</b>	Response <b>OK</b> Parameter: <broadcast> 0 disabled 1 enabled
Reference	Note

## Examples

**AT+CWBCAST?**

+CWBCAST: 1

**OK**

**AT+CWBCAST=0**

**OK**

## 2.4 AT+CWAUTH Authentication setting

### AT+CWAUTH Authentication type, encrypt mode and password setting

Read Command <b>AT+CWAUTH?</b>	Response <b>+CWAUTH:&lt;auth&gt;,&lt;encrypt&gt;[,&lt;password1&gt;]</b>  <b>OK</b> No parameter
Write Command <b>AT+CWAUTH=&lt;auth&gt;,&lt;encrypt&gt;[,&lt;password&gt;]</b>	Response <b>OK</b> Parameter <b>&lt;auth&gt;</b>

0	open/share
1	open
2	share
3	wpa
4	wpa2
<u>5</u>	wpa/wpa2

<encrypt>

0	null
1	WEP
2	TKIP
3	AES
<u>4</u>	TKIP-AES

< password> password string, the length is between 5 to 64. The char in the password is only allow the ASCII 's decimal code between 32 to 126.

The parameter need to meet the following conditions:

1. If(auth = 0 or auth = 1) then (encrypt = 0 or encrypt = 1)
2. If(auth =2) then (encrypt = 1)
3. If(auth >=3) then (encrypt >=2)
4. If(encrypt = 0) then (password is null)
5. If(encrypt = 1) then
  - {
    - 1) password can't be set null
    - 2) password format: (5 ASCII character) or (10 hexadecimal number) or(13 ASCII character) or(26 hexadecimal number)
6. if(encrypt >= 2) then
  - {
    - 1) password can't be set null
    - 2)password format: ( 8~63 ASCII character or 64 hexadecimal number)

Note

## Examples

```
AT+CWAUTH?  
+CWAUTH: 0,1, "11111"  
OK  
AT+CWAUTH?  
+CWAUTH: 5,4, "12345678"  
OK
```

```

Auth : open/share encrypt :null
AT+CWAUTH=0,0
OK
Auth : open/share encrypt :WEP
AT+CWAUTH=0,1,"11111"
OK
Auth : share encrypt :WEP      (ASCII character password : 12345)
AT+CWAUTH=2,1,"12345"
OK
Auth : share encrypt :WEP      (sixteen hexadecimal number : password 12345 )
AT+CWAUTH=2,1,"3132333435"
OK
Auth : WPA/WPA2 encrypt :TIKP-AES
AT+CWAUTH=5,4,"abcd1234"
OK

```

## 2.5 AT+CWMOCH 80211 mode and channel setting

### AT+CWMOCH 80211 mode and channel setting

Test Command <b>AT+CWMOCH?</b>	Response <b>+CWMOCH: &lt;mode&gt;,&lt;channel&gt;</b>  <b>OK</b> No parameter																					
Read Command <b>AT+CWMOCH=&lt;mode&gt;,&lt;channel&gt;</b>	Response <b>OK</b> Parameter: <b>&lt; mode &gt;</b> <table> <tr><td>1</td><td>a/n</td><td>5G mode</td></tr> <tr><td>2</td><td>b</td><td>2.4G mode</td></tr> <tr><td>3</td><td>b/g</td><td>2.4G mode</td></tr> <tr><td>4</td><td>b/g/n</td><td>2.4G mode</td></tr> <tr><td>5</td><td>ac/n</td><td>5G mode</td></tr> </table> <b>&lt; channel&gt;</b> <table> <tr><td>0</td><td>auto select</td></tr> <tr><td>1~11</td><td>2.4G mode channel number</td></tr> <tr><td>149/153/157/161/165</td><td>5G mode channel number</td></tr> </table> If <mode> is 1 (a/n)/5(ac/n), <channel> can be set 149/153/157/161/165 If <mode> is 2/3/4, <channel> range is 0~11 If <mode> is 1/5, the client must be support 5G mode	1	a/n	5G mode	2	b	2.4G mode	3	b/g	2.4G mode	4	b/g/n	2.4G mode	5	ac/n	5G mode	0	auto select	1~11	2.4G mode channel number	149/153/157/161/165	5G mode channel number
1	a/n	5G mode																				
2	b	2.4G mode																				
3	b/g	2.4G mode																				
4	b/g/n	2.4G mode																				
5	ac/n	5G mode																				
0	auto select																					
1~11	2.4G mode channel number																					
149/153/157/161/165	5G mode channel number																					

Reference	Note
-----------	------

## Examples

<i>AT+CWMCH?</i>
------------------

+CWMCH: 4,0
-------------

<i>OK</i>
-----------

<i>AT+CWMOCH =3, 1</i>
------------------------

<i>OK</i>
-----------

## 2.6 AT+CWISO Client isolation setting

### AT+CWISO Client isolation setting

Test Command <b>AT+CWISO=?</b>	Response <b>+CWISO: (0-1)</b>
-----------------------------------	----------------------------------

<b>OK</b>
-----------

No parameter
--------------

Test Command <b>AT+CWISO?</b>	Response <b>+CWISO: &lt;isolation&gt;</b>
----------------------------------	----------------------------------------------

<b>OK</b>
-----------

No parameter
--------------

Read Command <b>AT+CWISO=&lt;isolation&gt;</b>	Response <b>OK</b>
---------------------------------------------------	-----------------------

Parameter:
------------

<isolation>
-------------

0 close
---------

1 open
--------

Reference	Note
-----------	------

## Examples

<i>AT+CWISO?</i>
------------------

+CWISO: 1
-----------

<i>OK</i>
-----------

<i>AT+CWISO=0</i>
-------------------

<i>OK</i>
-----------

## 2.7 AT+CWDHCP Get the current DHCP configuration

AT+CWDHCP Get the current DHCP configuration	
Test Command <b>AT+CWDHCP?</b>	Response <b>+CWDHCP:&lt;host_ip&gt;,&lt;range_start_ip&gt;,&lt;range_end_ip&gt;,&lt;leasetime&gt;</b>
	<b>OK</b>
	No parameter
Reference	Note

### Examples

```
AT+CWDHCP?
+CWDHCP: "192.168.0.1","192.168.0.100","192.168.0.140",12h
OK
```

## 2.8 AT+CWNAT NAT type setting

AT+CWNAT NAT type setting	
Test Command <b>AT+CWNAT=?</b>	Response <b>+CWNAT: (0-1)</b>
	<b>OK</b>
	No parameter
Test Command <b>AT+CWNAT?</b>	Response <b>+CWNAT: &lt;type&gt;</b>
	<b>OK</b>
	No parameter
Read Command <b>AT+CWNAT=&lt;type&gt;</b>	Response <b>OK</b>
>	Parameter: <type> 0 Symmetric 1 Cone
Reference	Note

### Examples

**AT+CWNAT?**

+CWNAT: 1

OK

**AT+CWNATT=0**

OK

## 2.9 AT+CWCLICNT Get client number connected to the WIFI

### AT+CWCLICNT Get the client number connected to the WIFI

Read Command

**AT+CWCLICNT?**

Response

+CWCLICNT: <cnt>

OK

No parameter

### Examples

**AT+CWCLICNT?**

+CWCLICNT: 1

OK

## 2.10 AT+CWRSTD Restore to default setting

### AT+ CWRSTD Restore all MIFI setting to default

Test Command

**AT+CWRSTD**

Response

OK

No parameter

The module will reboot after restore

Reference

Note

### Examples

**AT+CWRSTD**

OK

## 2.11 AT+CWMAPCFG WIFI configuration setting

AT+CWMAPCFG WIFI mode, configuration AP ID setting	
<p>Read Command  <b>AT+CWMAPCFG?</b></p>	<p>Response  <b>+CWMAPCFG: &lt;enablessid2_value&gt;,&lt;configselect_value&gt;</b></p> <p><b>OK</b></p> <p>Parameter  <b>&lt;enablessid2_value&gt;</b>  0 AP mode  1 AP-AP mode  2 STA-AP mode  <b>&lt;configselect_value&gt;</b>  Current AP ID (0 or 1 or 2)</p>
<p>Write Command  <b>AT+CWMAPCFG=</b>  <b>&lt;option&gt;,&lt;value&gt;</b></p>	<p>Response  <b>OK</b></p> <p>Parameter  <b>&lt;option&gt;</b>  "enablessid2" set WIFI mode  "configselect" set the current AP ID  <b>&lt;value&gt;</b>  the value of the options.  If (option="enablessid2")  0 AP mode  1 AP-AP mode  2 STA-AP mode  If (option="configselect")  Current AP ID (0 or 1 or 2) to be set.  When current AP ID is 0, the  AT+CWSSID/AT+CWBCAST/AT+CWAUTH/AT+CWMOCH/AT+CWISO/AT+  CWDHCP/AT+CWLICNT/AT+CWMACADDR will modify the first AP's  settings;  When current AP ID is 1, the  AT+CWSSID/AT+CWBCAST/AT+CWAUTH/AT+CWMOCH/AT+CWISO/  AT+CWDHCP/AT+CWLICNT/AT+CWMACADDR will modify the second  AP's settings;  When current AP ID is 2, the  AT+CWSSID/AT+CWBCAST/AT+CWAUTH/AT+CWMOCH/AT+CWISO/  AT+CWDHCP/AT+CWLICNT/AT+CWMACADDR will modify the third AP's  settings, the AT+CWSTAIP/AT+CWSTASCAN/AT+CWSTACFG  Will modify the STA's settings.</p>

Test Command <b>AT+CWMAPCFG=?</b>	Response <b>+CWMAPCFG: ("enablessid2","configselect"),(0-2)</b>  <b>OK</b>
	Note: 1. It can't set the configselect value to 1 when enablessid2 is 0. 2. Reset the module when change the enablessid2's value. 3. You should set the configselect value to 2 when enablessid2 is 2.

## Examples

```
AT+CWMAPCFG=?  
+CWMAPCFG: ("enablessid2","configselect"),(0-2)  
OK  
AT+CWMAPCFG?  
+CWMAPCFG: 0,0  
OK  
Set enablessid2  
AT+CWMAPCFG="enablessid2",1  
OK  
Set configselect  
AT+CWMAPCFG="configselect",0  
OK
```

## 2.12 AT+CWLANSRV LAN SERVER setting

AT+CWLANSRV	LAN server setting
Read Command <b>AT+CWLANSRV?</b>	Response <b>+CWLANSRV: &lt;server_ip&gt;,&lt;server_port&gt;</b>  <b>OK</b>
	Parameter <b>&lt;server_ip&gt;</b> Default 192.168.225.1 <b>&lt;server_port&gt;</b> Default 5555
Write Command <b>AT+CWLANSRV=&lt;value&gt;</b>	Response <b>OK</b> Parameter <b>&lt;value&gt;</b> 0 close the server

	<p>1 open the server</p> <p>Note If module power off, the command will restore the default value.</p>
<p>Write Command <b>AT+CWLANSRV=0</b> ,&lt;server_port&gt;</p>	<p>Response <b>OK</b></p> <p>Parameter <b>&lt;server_port&gt;</b> <b>Default 5555</b> The range of permitted values is 1024 to 65535.</p> <p>Note <b>The command will close the server first.</b></p>

## Examples

```
AT+CWLANSRV?
+CWLANSRV: 192.168.225.1,5555
OK
AT+CWLANSRV=1
OK
AT+CWLANSRV=0,44444
OK
```

## 2.13 AT+CWLANMSG Send message

Must open the lan server first(AT+CWLANSRV=1).

<b>AT+CWLANMSG</b> Send message	
Write Command	Response
<b>AT+CWLANMSG=</b>	<b>OK</b>
<message>	Parameter <b>&lt;message &gt;</b> Hexadecimal string. The max length of message is 512.
Received urc message	Parameter <b>&lt;message &gt;</b> Hexadecimal string. (1) The message must end with 0x0A from the client. (2) The max length of <message> is 1024, and ignore others.
<b>+CWLANMSG:</b>	<b>&lt;tail&gt;</b> 0x0D0A0D0D0A Normal tail. 0x0D0D0A The message has 0x00.
<message><tail>	

## Examples

```
AT+CWLANSRV=1  
OK  
AT+CWLANMSG="31323434"  
OK  
+CWLANMSG: 1234|r\n|r|r\n
```

## 2.14 AT+CWMACADDR Get MAC address

AT+CWMACADDR Get MAC address	
Test Command	Response
<b>AT+CWMACADDR</b>	[<number>,<mac_addr>]
?	... ...
	<b>OK</b>
	Parameter
<number>	
0 host mac addr	
1 client mac addr	
... client mac addr	
<mac_addr>	
<b>Device mac address</b>	
	Note

## Examples

```
AT+CWMACADDR?  
0,00:0A:F5:88:88:8F  
1,74:23:44:8f:64:fd
```

OK

## 2.15 AT+CWNETCNCT Query the connection to the network

AT+CWNETCNCT Query the connection to the network	
Read Command	Response
<b>AT+CWNETCNCT</b>	+CWNETCNCT: <flag>
?	<b>OK</b>

	Parameter: <b>&lt;flag&gt;</b> 0 disconnect 1 connect
Reference	Note

## Examples

```
AT+CWNETCNCT?  
+CWNETCNCT: 1  
OK
```

## 2.16 AT+CWSTAIP Get STA mode IP address

AT+CWSTAIP Get STA mode IP address	
Read Command <b>AT+CWSTAIP?</b>	Response [+CWSTAIP: <ip address>]  <b>OK</b>

## Examples

```
AT+CWSTAIP?  
+CWSTAIP: 192.168.11.27  
OK
```

## 2.17 AT+CWSTASCAN Scan WIFI network

AT+CWSTASCAN Scan WIFI network	
Read Command <b>AT+CWSTASCAN</b>	Response [+CWSTASCAN: <bssid>,<ssid>] ... ...  <b>OK</b>
Parameter <b>&lt;bssid&gt;</b>	The MAC address of external wireless network.

**<ssid>**

The SSID name of external wireless network.

## Examples

```
AT+CWSTASCAN
+CWSTASCAN:
4c:e6:76:49:2a:48, simtest
```

OK

## 2.18 AT+CWSTACFG STA mode configuration setting

### AT+CWSTACFG STA mode configuration setting

Read Command <b>AT+CWSTACFG?</b>	Response <b>+CWSTACFG: &lt;ssid&gt;,&lt;security&gt;[,&lt;proto&gt;,&lt;psk&gt;]</b>  <b>OK</b> No parameter
Write Command <b>AT+CWSTACFG=&lt;ssid&gt;,&lt;security&gt;[,&lt;proto&gt;,&lt;psk&gt;]</b>	Response <b>OK</b> Parameter <b>&lt;ssid&gt;</b> The SSID name of external wireless network. <b>&lt;security&gt;</b> Accepted authenticated key management protocol. <b>0</b> NONE <b>1</b> WPA-EAP <b>2</b> WPA-PSK <b>&lt;proto&gt;</b> Accepted protocol of external wireless network. <b>0</b> WPA <b>1</b> WPA2(RSN) <b>&lt;psk&gt;</b> The password of external wireless network.
	Note: The configselect value must set to 2.

## Examples

```
AT+CWSTACFG= "simtest",2,1,"1234567890"
```

OK

```
AT+CWSTACFG?
```

```
+CWSTACFG: "simtest",2,1,"1234567890"
```

OK

## 2.19 AT+CWUSRINFO Auth info of wifi data call setting

AT+CWUSRINFO Auth infomation of wifi data call setting	
Test Command <b>AT+CWUSRINFO=?</b>	Response <b>+CWUSRINFO: (1-127),(1-127)</b> <b>OK</b>
	No parameter
Read Command <b>AT+CWUSRINFO?</b>	Response <b>+CWUSRINFO: &lt;username&gt;,&lt;password&gt;</b> <b>OK</b>
	No parameter
Write Command <b>AT+CWUSRINFO=&lt;username&gt;,&lt;password&gt;</b>	Response <b>OK</b>
	Parameter: <username> username string. The length is from 1 to 127. <password> password string. The length is from 1 to 127.
Reference	Note: 1. It need to reset when set the username and password. 2. If not set the username and password, the default value is "ctnet@mycdma.cn" and "vnet.mobi".

### Examples

```
AT+CWUSRINFO=?
```

```
+CWUSRINFO: (1-127),(1-127)
```

OK

```
AT+CWUSRINFO?
```

```
+CWUSRINFO: "ctnet@mycdma.cn","vnet.mobi"
```

OK

```
AT+CWUSRINFO = "username","pwd"
```

OK

### 3. Coexistence with MIFI

#### 3.1 PPP-DIALUP when MIFI is running

When MIFI is running on the SIM7600CE module, the PPP-dialup only works on another pdp context if the network supports(LTE and UMTS). In 1xEvDo mode, the PPP cannot work when the MIFI is working.

#### 3.2 RMNET when MIFI is running

When MIFI is running on the SIM7600CE module, the rmnet-dialup only works on another pdp context if the network supports (LTE and UMTS). In 1xEvDo mode, the rmnet-dialup cannot work when the MIFI is working.

#### 3.3 Embedded TCPIP when MIFI is running

When MIFI is running on the SIM7600CE module, the embedded tcip at commands can work only if the ip filter is configured. If not , the route to internet can be disordered.

The example shows here:

AT+CIPFILTERSET=0,1

OK

AT+NETOPEN

OK

+NETOPEN:0

AT+CIPOEN=0,"TCP","116.195.234.555",9876

OK

+CIPOEN:0,0

## Contact Us

### **Shanghai SIMCom Wireless Solutions Ltd.**

Add: Building A, SIM Technology Building, No.633, Jinzhong Road, Changning District  
200335

Tel: +86 21 3252 3300

Fax: +86 21 3252 3301

URL: <http://www.sim.com/wm/>

STIMCOM CONFIDENTIAL FILE